

## KRONE TPMS MANUAL

## SENSOR REPLACEMENT






When fitting a new tire with a new sensor, the new sensor has to be stored in the TPMS control unit configuration. This can be done with the "TPMS Service App" from KRONE - Availible free of charge in the iOS Appstore and Google Playstore. If the old sensor is reused in the same position, no change in the configuration is needed.



Please ensure external power supply (**ignition ON**)!

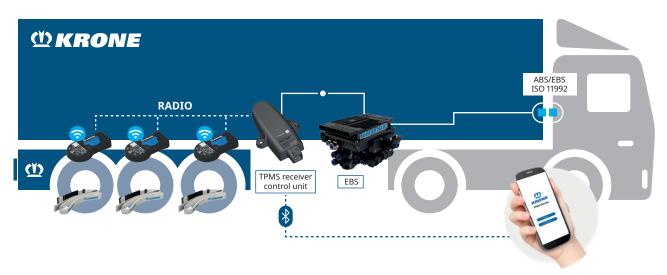

1.

Download the "TPMS Service App" from KRONE.







Open the app and log-in as a workshop by clicking on "Sign In".  $\,$ 




CONTACT: KRONE TPMS SERVICE


Phone: +49 5951 209 260 | tpms.nfz@krone.de Fahrzeugwerk Bernard KRONE GmbH & Co. KG Bernard-Krone-Straße 1, 49757 Werlte, GERMANY www.krone-trailer.com



 DE **EN** 1/4



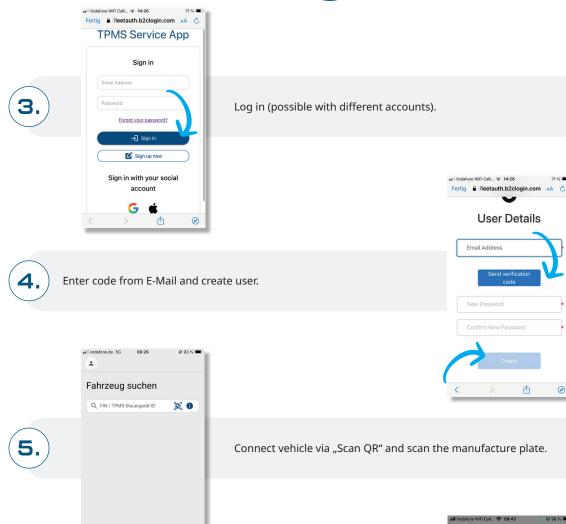








× QR-Code scannen

(I) KRONI



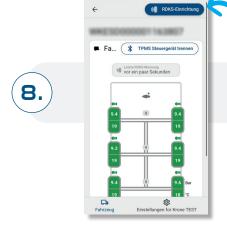

Then start the TPMS setup.

SENSOR REPLACEMENT

(E.G. TYRE 1ST AXLE LEFT HANDSIDE: 1L):

9. Identify the position of the affected sensor and start replacement. Note: 1L = 1st axle left, 1R = 1st axle right etc.



Enter new sensor ID, various options possible:

- · Manual entry (e.g. from 433 MHz reader)
- $\cdot$  Scan the QR code on the sensor
- · Scan barcode on tire





Confirm sensor replacement.



û #





Confirm new configuration.

Sensor replaced and the process is complete.

